 




How to remove the faucet cover


1 Pull the transparent ring toward you.



  - Then ,pull on the ring in a angle and keep the pressure downward
- 3 Slide the cover toward you

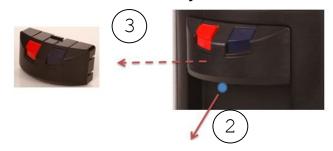





Before placing back the cover, you could try by pressing on levers to see if water is coming out correctly.

5 Put back the cover, slide it into place.