

### SPECIFICATIONS

#### PRODUCT SPECIFICATIONS

WaterSentry VII Replacement Filter (Coolers + Fountains). Overall dimensions are 3-1/2" x 3-1/2" x 12".

<b>Dimensions:</b>	3-1/2" x 3-1/2" x 12"
<b>Shipping Weight:</b>	2 lbs.
<b>Capacity:</b>	1500 gal. (5678L)
<b>Flow Rate:</b>	1.5 GPM (5.6 L/m)
<b>Temperature:</b>	40-100°F (4-38°C)
<b>Initial Pressure Drop:</b>	2-5 PSI (14-34 kPa)
<b>Maximum Pressure:</b>	105 PSI (724 kPa)
<b>Minimum Pressure:</b>	20 PSI (138 kPa)
<b>Water Inlet:</b>	3/8" (9.5mm) O.D. tube
<b>Water Outlet:</b>	1/4" (6.4mm) O.D. tube

**Special Note:** Replacement filter for HWF172 WaterSentry® VII systems in water coolers + fountains

- Replacement filter for models with WaterSentry VII filtration system (Coolers + Fountains).
- Filter should be replaced every 1,500 gallons or 1 year after installation.
- Equipped with Quick-Disconnect, 1/4 turn installation, as well as automatic inlet shut-off valve that closes when filter is removed.
- Designed to reduce lead, particles and chlorine. Also reduces odors and discoloration from incoming water.
- Spun Polypropylene prefilter mesh to prevent large, coarse sediment and particles from entering and clogging filter media.
- Filter is certified to NSF 42 and 53 for lead, particulate class 1, chlorine, taste and odor reduction.



**Included with Product:** 1500 gal replacement filter cartridge

**AMERICAN PRIDE. A LIFETIME TRADITION.** Like your family, the Elkay family has values and traditions that endure. For almost a century, Elkay has been a family-owned and operated company, providing thousands of jobs that support our families and communities.



**Product Compliance:** NSF 42  
NSF 53  
NSF 372 (lead free)



[Installation Instructions \(PDF\)](#)

#### INSTALLATION INSTRUCTIONS

The filter must be installed in compliance with all state and local laws and regulations governing the installation and use of this product. Disconnect electrical power and close water supply valve before proceeding.

The filter must be installed in the cold water line. Flow indicator (arrow) on filter should point in the same direction as the water flow.

After installing new filter, open water supply valve and check for leaks. Reconnect electrical power supply. Flush system sufficiently (approximately 3 minutes) to effectively remove small residue of carbon fines.


NOTE: A water shutoff valve should be installed on the incoming water line to aid in future servicing of filter.

#### CAUTION

• Filter is designed to reduce lead from incoming water to levels below EPA requirements. Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system.

• Use on cold water line only. Do not allow installed filter to freeze. Do not attach hot water line to filter.

• Filter should be replaced every 1500 gallons (5678 liters), or approximately 1 year after installation.

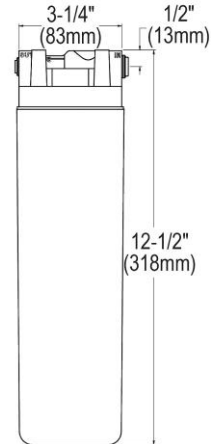

PART: \_\_\_\_\_ QTY: \_\_\_\_\_

PROJECT: \_\_\_\_\_

CONTACT: \_\_\_\_\_

DATE: \_\_\_\_\_

NOTES: \_\_\_\_\_

APPROVAL: \_\_\_\_\_

*In keeping with our policy of continuing product improvement, Elkay reserves the right to change product specifications without notice. Please visit [elkay.com](http://elkay.com) for the most current version of Elkay product specification sheets. This specification describes an Elkay product with design, quality, and functional benefits to the user. When making a comparison of other producers' offerings, be certain these features are not overlooked.*