



THERMO CONCEPTS

1. Unplug the cooler from the inlet.
2. Unscrew all the screws to get to the thermostat.
3. Move the condensor (black grid) gently to the right side.
4. Pull on the thermostat to get the probe out of the cooper liner.
5. Leave the wires connected to the thermostat for the moment

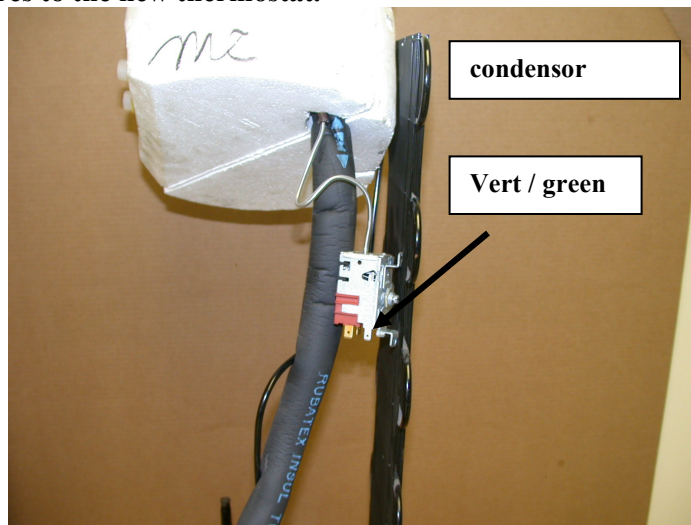

1. Dip the tip of the new thermostat in vaseline (optional).
2. Insert the probe all the way in.
3. Plug back the wires to the new thermostat.

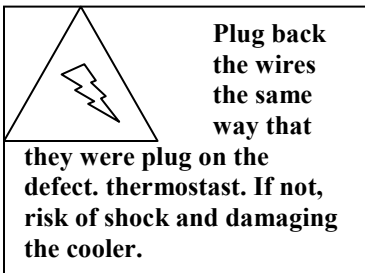

4. Replace the condensor
5. Put back the screws
6. Setting of the thermostat
 - Turn the screw of the thermostat all the way left
 - After do a $\frac{1}{4}$ turn to the right. (factory setting)
7. Plug the cooler back into the inlet.